Felicitaciones, acaba de comprar una de las mejores pistolas de limpieza de manchas disponibles en la actualidad. Está fabricado según los altos estándares de calidad de TEKMAR con los mejores materiales y piezas disponibles. Cuando se utiliza según las instrucciones, debería proporcionar años de servicio sin problemas.

Para un funcionamiento seguro, es importante comprender que esto no es un juguete. Es una pistola pulverizadora sin aire de alta potencia que, si no se utiliza según las indicaciones, tiene el potencial de provocar una herida punzante grave.

**DIRECCIONES:**

1. No son necesarios ajustes traseros en la pistola; viene configurada de fábrica para un rendimiento óptimo. Para restablecer la pistola a la configuración de fábrica, gire la perilla de control de volumen trasera en el sentido de contrario las agujas del reloj hasta que se detenga y luego gírela en el sentido las agujas del reloj 2½ vueltas completas.
2. Llene la botella de fluido hasta 4/5 de su capacidad y vuelva a colocarla en la pistola. Apriete el gatillo hasta que la pistola se cebe y salga líquido de la boquilla.
3. Colque la prenda a limpiar sobre una superficie de bambú o extractor. Dirija un chorro de solvente de limpieza a través de la mancha con un movimiento circular, hasta que la suciedad desaparezca.
4. Para evitar zumbidos, ajuste la boquilla a un patrón de rociado amplio y rocíe alrededor del borde húmedo para suavizar la transición de húmedo a seco.
5. Pruebe siempre la tela en un área discreta para garantizar la solidez del color.
6. Vacíe el recipiente de líquido mientras almacena la unidad durante la noche o cuando no esté en uso durante un período prolongado

**PELIGRO:**

- NO UTILIZAR CON LÍQUIDOS INFLAMABLES.
- NO UTILIZAR CON AGUA O SOLUCIONES A BASE DE AGUA.
- ES MUY RECOMENDABLE EL USO DE UN ASPIRADOR DE VACÍO.
- NO ROCIAR EN LAS MANOS NI EN NINGUNA PARTE DEL CUERPO. PUEDEN OCURRIR LESIONES GRAVES.

**REPARACIÓN DE GARANTÍA:**

El Target TG200 MK II está cubierto por una garantía limitada de por vida.onsultela información de garantía en www.tekmarltd.com/warranty para obtener detalles completos. La garantía no cubre daños debidos a la caída de la pistola o negligencia como resultado del uso inadecuado de productos químicos (a base de agua).

Para servicio o reparación, debe comunicarse con Tekmar al 805-965-0704 o service@tekmarltd.com para obtener una RMA antes de enviar la pistola de limpieza a reparar. Incluya toda la información de contacto con un teléfono/correo electrónico, junto con una copia de su recibo (si está disponible) y una descripción del problema experimentado.

Congratulations, you have just purchased one of the finest spot cleaning guns available today. It is manufactured to TEKMAR's high quality standards from the best available materials and parts. When used as directed it should provide years of trouble free service.

For safe operation it is important to understand that this is not a toy. It is a high powered airless spray gun which has the potential, when not used as directed, to cause a serious puncture wound.

**DIRECTIONS:**

1. No Rear adjustments are necessary on the gun - it is factory set for optimum performance. To reset gun to factory settings, turn the rear volume control knob counter-clockwise until it stops - then turn it clockwise 2½ complete turns.
2. Fill fluid bottle 4/5 full and replace on gun. Squeeze trigger until gun primes and fluid comes out of the nozzle.
3. Place garment to be cleaned on a buck or exhauster surface. Direct a jet of cleaning solvent through stain in a circular motion, until soil is flushed through.
4. To avoid ringing adjust nozzle to wide spray pattern and spray around wet edge to feather out giving a smooth transition from wet to dry.
5. Always test fabric in an inconspicuous area to ensure color fastness.
6. Empty fluid container while storing unit overnight or when not in use for an extended period.

**DANGER:**

- DO NOT USE WITH FLAMMABLE LIQUIDS.
- DO NOT USE WITH WATER OR WATER BASED SOLUTIONS.
- THE USE OF A VACCUM EXHAUSTER IS HIGHLY RECOMMENDED.
- DO NOT SPRAY INTO HANDS OR ANY PARTS OF THE BODY. SERIOUS INJURY CAN OCCUR.

**WARRANTY/REPAIR:**

The Target TG200 MK II is covered by a lifetime limited warranty. See warranty information at www.tekmarltd.com/warranty for full details. Warranty does not cover damage due to gun being dropped or neglect as a result of improper chemical being used (water based).

For service or repair you must contact Tekmar at 805-965-0704 or service@tekmarltd.com to get an RMA prior to sending the cleaning gun in for service. Please include all contact information with a phone/email, along with a copy of your receipt (if available) and a description of the problem experienced.

# TEKMAR™

# TG200 MK II


## TEXTILE SPOT CLEANING GUN




**Technical Marketing, Ltd**
**927 Hutash Street, Santa Barbara,**
**CA 93103 USA**

**Tel. 805 965 0704 www.tekmarltd.com**
**Fax 805 963 7794 sales@tekmarltd.com**


## SPARE PARTS LIST

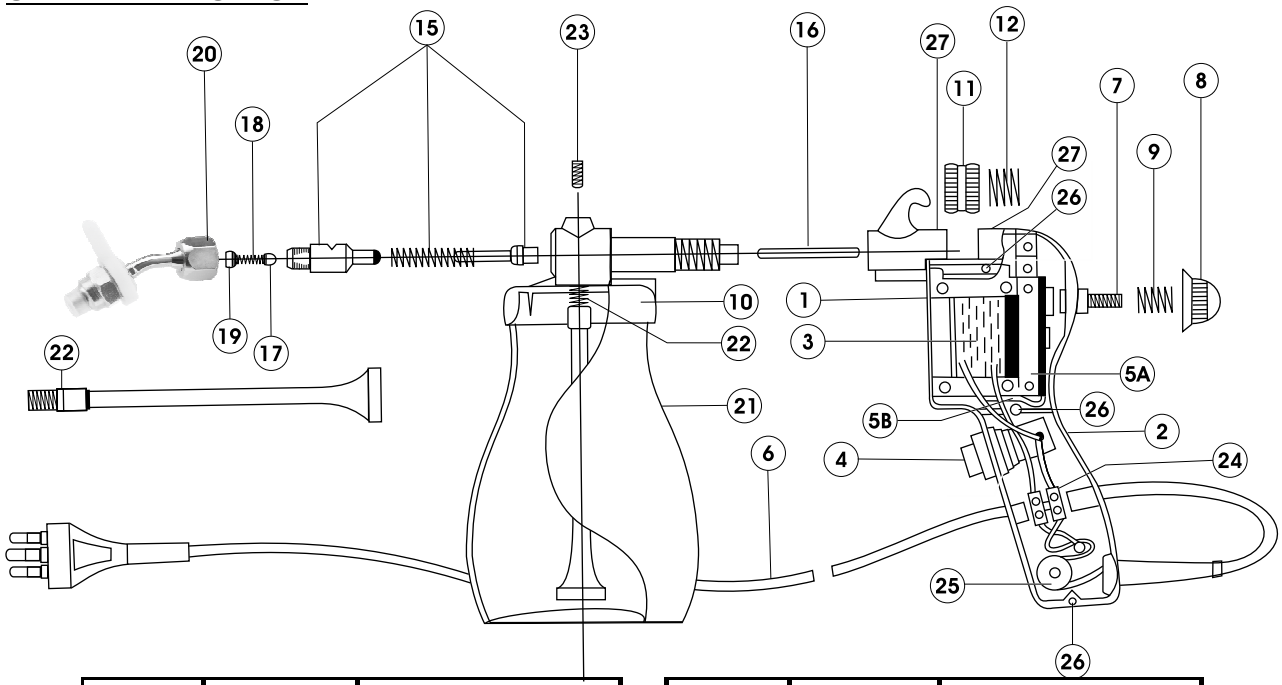



| Item No. | Part No. | Description |
|---|---|---|
| 1 | 200P-01 | GUN HOUSING |
| 2 | 200P-02 | HANDLE SET |
| 3 | 200P-03 | COIL MOTOR (110V) |
| 3 | 200P-03-220 | COIL MOTOR (220V) |
| 4 | 200P-04 | SWITCH |
| 5A | 200P-05 | ARMATURE |
| 5B | 200P-05B | ARMATURE SPRING |
| 6 | 200P-06 | ELECTRIC CORD |
| 7 | 200P-07 | BUFFER |
| 8 | 200P-08 | VOLUME CONTROL |
| 9 | 200P-09 | VOLUME SPRING |
| 10 | 200P-010 | PUMP HOUSING |
| 11 | 200P-011 | ADJUSTING ROLLER |
| 12 | 200P-012 | ROLLER SPRING |
| 15 | 200P-015 | PUMP ASSEMBLY |
| 16 | 200P-016 | PUMP ROD |
| 17/18/19 | 200P-017 | VALVE |

| Item No. | Part No. | Description |
|---|---|---|
| 20 | TG1 | NOZZLE |
| 21 | 200P-21 | CONTAINER |
| 22 | 200P-22 | SUCTION TUBE |
| 23 | 200P-23 | PUMP SCREW |
| 24 | 200P-24 | TERMINAL BLOCK |
| 25 | 200P-25 | RUBBER GUIDE |
| 26 | 200P-26 | CASE SCREW |
| 27 | | OIL HOLE |

The TG200 MK II Is equipped with a Oil Port for smooth running and prolonged life of gun. Use a few drops of Sewing machine oil or a 3-in-1 type oil weekly.

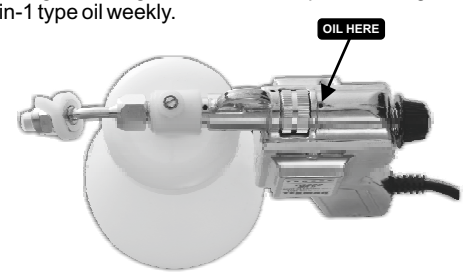


**! CAUTION !**

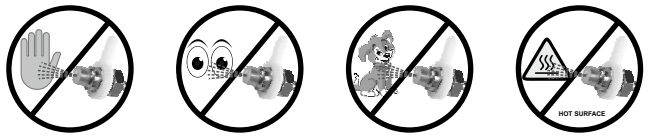


- **HIGH PRESSURE Never aim gun at skin or eyes - can cause serious injury. Do not spray on body or animals.**
- **DO NOT Spray flammable liquids through this Spray Gun.**
- **Do not use with water based solutions.**
- **Always use with adequate ventilation. The use of a vacuum exhauster is highly recommended.**
- **Wear googles and gloves when using this device. Use correct personal protective equipment (PPE) recommended for the solvent being sprayed.**
- **Do not allow children to use this device. Keep out of reach of Children.**
- **Do not spray on open flame, hot surfaces or electrical outlet.**
- **Device should only be used for intended purpose of textile cleaning.**
- **Do not use near water or immerse in water. If device falls in water, unplug immediately before reaching for unit.**
- **Do not use with wet or damp hands or electric shock or death can occur.**
- **Do not twist, crush or bend the electrical cord. If damaged it must be replaced by authorized repair center.**
- **Do not allow any foreign object or item to fall in fluid container. Only use with approved solvent.**
- **Always make sure that electrical outlet is the correct rating for the voltage indicated on the device.**

**! IMPORTANT !**

NEVER RUN FLAMMABLE OR WATER BASED FLUIDS THROUGH THIS GUN. DOING SO WILL VOID WARRANTY.

**The TG200 MK II PRO is designed for intermittent use only. Always spray ON for 15 seconds and OFF for 15 seconds. Extended use can cause over-heating and can damage the spray gun.**